


Description

- take-off/starting collar
- to be installed on flat side of rectangular duct or plenum

Ordering Example

Gasketed, G-3	<u>Type</u> ILG	^ø d₁ aa
Ungasketed, G-0	<u>Type</u> IL	^ø d₁ aa

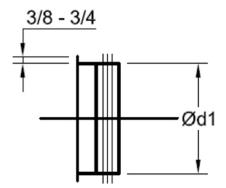

^Ø d₁	Weight
(in)	(lb)
3	0.1
4	0.1
5	0.1
6	0.1
7	0.1
8	0.3
9	0.3
10	0.5
12	0.5
14	0.5
16	0.6
18	0.8
20	1.0
22	1.2
24	1.3

